


Dit document mag slechts op een stand-alone PC worden geïnstalleerd. Gebruik op een netwerk is alleen toestaan als een aanvullende licentieovereenkomst voor netwerkgebruik met NEN is afgesloten.
This document may only be used on a stand-alone PC. Use in a network is only permitted when a supplementary license agreement for us in a network with NEN has been concluded.

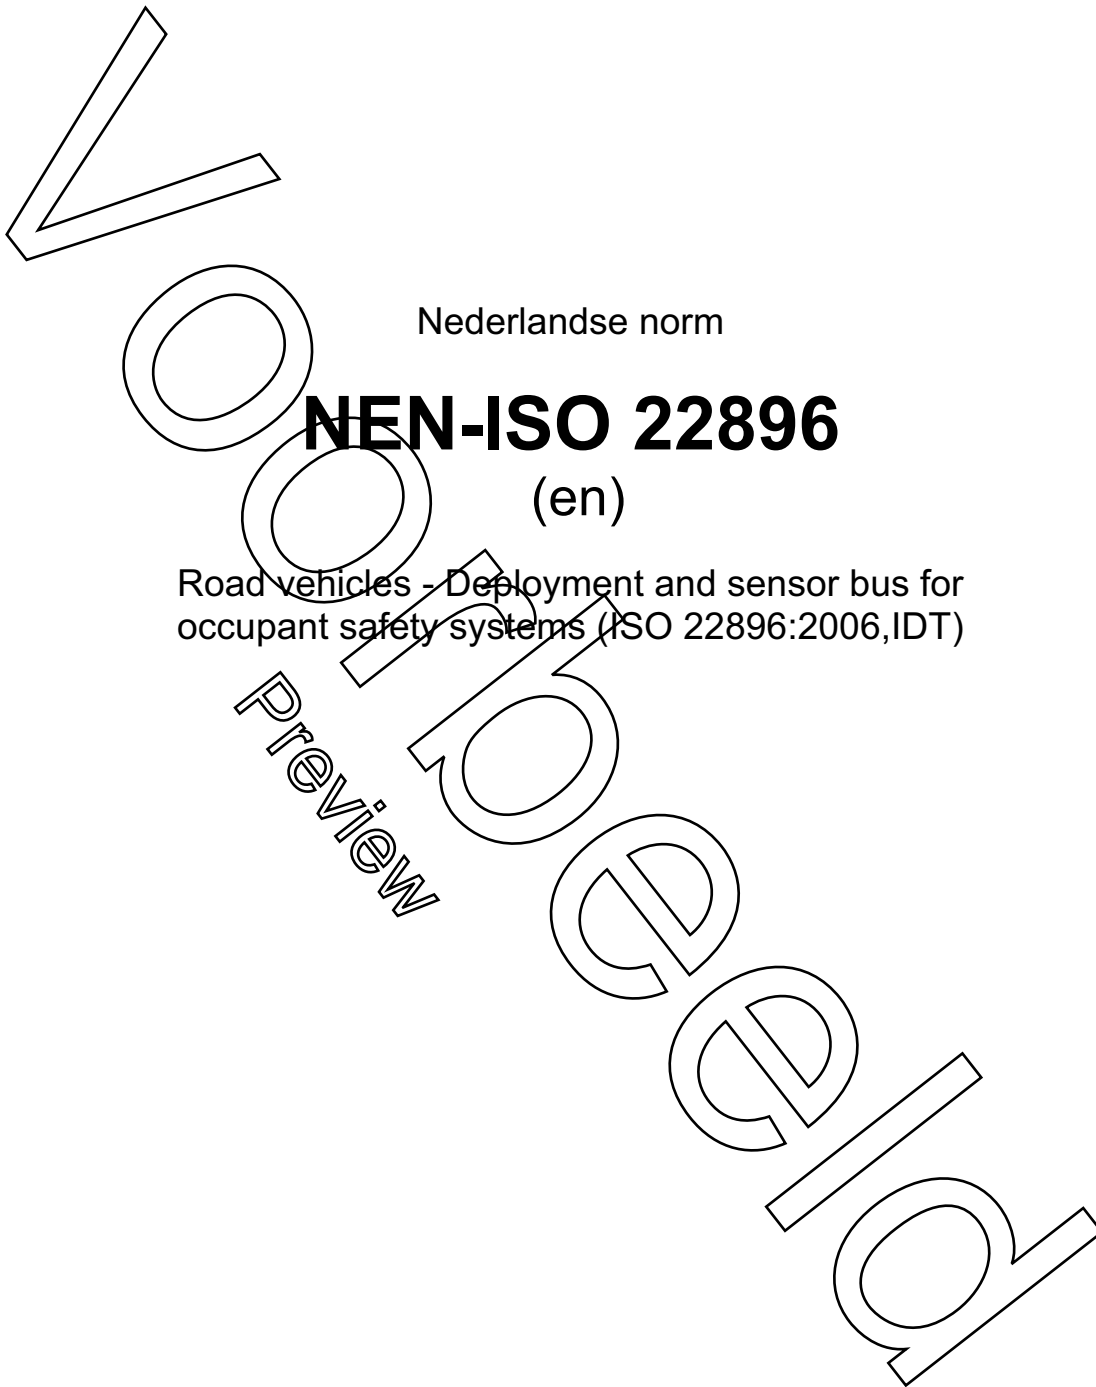

Nederlandse norm

NEN-ISO 22896

(en)

Road vehicles - Deployment and sensor bus for occupant safety systems (ISO 22896:2006, IDT)

ICS 43.040.80
november 2006

Als Nederlandse norm is aanvaard:

- ISO 22896:2006, IDT

VOORBEELD
Preview

Normcommissie 345 042 "Wegvoeren" ^{Norm}

Apart from exceptions provided by the law, nothing from this publication may be duplicated and/or published by means of photocopy, microfilm, storage in computer files or otherwise, which also applies to full or partial processing, without the written consent of the Netherlands Standardization Institute.

The Netherlands Standardization Institute shall, with the exclusion of any other beneficiary, collect payments owed by third parties for duplication and/or act in and out of law, where this authority is not transferred or falls by right to the Reproduction Rights Foundation.

Auteursrecht voorbehouden. Behoudens uitzondering door de wet gesteld mag zonder schriftelijke toestemming van het Nederlands Normalisatie-instituut niets uit deze uitgave worden verveelvoudigd en/of openbaar gemaakt door middel van fotokopie, microfilm, opslag in computerbestanden of anderszins, hetgeen ook van toepassing is op gehele of gedeeltelijke bewerking.

Het Nederlands Normalisatie-instituut is met uitsluiting van ieder ander gerechtigd de door derden verschuldigde vergoedingen voor verveelvoudiging te innen en/of daartoe in en buiten rechte op te treden, voor zover deze bevoegdheid niet is overgedragen c.q. rechtens toekomt aan de Stichting Reprorecht.

Although the utmost care has been taken with this publication, errors and omissions cannot be entirely excluded. The Netherlands Standardization Institute and/or the members of the committees therefore accept no liability, not even for direct or indirect damage, occurring due to or in relation with the application of publications issued by the Netherlands Standardization Institute.

Hoewel bij deze uitgave de uiterste zorg is nagestreefd, kunnen fouten en onvolledigheden niet geheel worden uitgesloten. Het Nederlands Normalisatie-instituut en/of de leden van de commissies aanvaarden derhalve geen enkele aansprakelijkheid, ook niet voor directe of indirecte schade, ontstaan door of verband houdend met toepassing van door het Nederlands Normalisatie-instituut gepubliceerde uitgaven.

Preview

Road vehicles — Deployment and sensor bus for occupant safety systems

Véhicules routiers — Bus de déploiement et de capteurs pour les systèmes de sécurité des occupants



PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

Copyright
Preview

© ISO 2006

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 01 11
Fax + 41 22 749 09 47
E-mail copyright@iso.org
Web www.iso.org

Published in Switzerland

Contents

Page

Foreword.....	iv
1 Scope.....	1
2 Terms and definitions.....	1
3 Abbreviations.....	3
4 General.....	4
5 System architecture.....	5
5.1 General.....	5
5.2 Deployment bus.....	5
5.3 Sensor bus.....	5
5.4 Combined sensor and deployment bus.....	6
6 Physical Layer.....	6
6.1 Bus medium.....	6
6.2 Bus topology.....	6
6.3 Bus load.....	8
6.4 Bus signals.....	10
6.5 Bit coding.....	12
6.6 Fault tolerance.....	15
6.7 Use of analogue safing on a deployment bus.....	17
6.8 Bus signal parameters.....	18
7 Data Link Layer.....	22
7.1 Bus Idle.....	22
7.2 Addresses.....	22
7.3 Message frames.....	24
7.4 Bit fields within a frame.....	32
8 Application Layer.....	35
8.1 General.....	35
8.2 Common D-Frame commands.....	36
8.3 Memory layout of slaves.....	37
8.4 Application Layer for deployable devices.....	42
8.5 Application Layer for sensor devices.....	47
Annex A (informative) In-car address programming for daisy-chain systems.....	50
Annex B (informative) Guideline for definition of deviations from standard parameters.....	51
Annex C (informative) Rationale of functionality.....	52
Annex D (informative) Latency time analysis for interrupts from smart sensors.....	53
Annex E (informative) CRC examples.....	56
Annex F (informative) Deployable devices.....	57
Annex G (informative) Slave manufacturer identification codes.....	60

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 22896 was prepared by Technical Committee ISO/TC 22, *Road vehicles*, Subcommittee SC 3, *Electrical and electronic equipment*.

Copyright
Preview

Road vehicles — Deployment and sensor bus for occupant safety systems

1 Scope

This International Standard is a specification of a serial communications bus protocol for automotive occupant restraint systems. It covers Physical Layer and Data Link Layer and those parts of the Application Layer that are not supplier-specific.

2 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

2.1

analogue safing

using a special *bus level (LS0-level)* for confirmation of deploy messages

2.2

bitmap addressing

method of addressing one or several slaves at a time by assigning each bit of the address field to a different *slave*

2.3

bus level

one out of four levels of the differential bus voltage, whereof one forms the *Power Phase* and the other three are used for representation of a data bit during the *Data Phase*

2.4

command

part of a *D-Frame*, transmitted by the master, defining the purpose of the frame

2.5

CRC field

part of a *D-Frame* or *S-Frame*

2.6

data field

part of a *D-Frame*

2.7

Data Phase

part of a data bit providing the bit value

2.8

deploy command family

four commands for control of *deployable devices*

2.9

deployable device

irreversible actuator

ISO 22896:2006(E)

2.10

D-Frame

type of frame primarily used for diagnostic communication and actuation of *deployable devices*

2.11

differential bus voltage

differential voltage between the two bus wires

2.12

duty cycle

percentage of a bit time that is assigned to the *Power Phase*

2.13

E-bit

bit in a *D-Frame* indicating an error or a "read" command

2.14

half-rate

mode used for sensors that shall not reply in every *S-Frame*

2.15

hold-up capacitor

capacitor supplying power to a *slave* during the *Data Phase*

2.16

latency time

worst-case duration between the occurrence of an interrupt requesting event in the sensor and the actual start of an *S-Frame* polling message

2.17

LS0-level

bus level indicating an error, a bus interrupt or a "0" with *analogue safing*

2.18

L0-level

bus level indicating a "0"

2.19

L1-level

bus level indicating a "1"

2.20

master

device responsible for communication on the bus and for power distribution over the bus

2.21

Multi-Sharing

mode used in *S-Frames* for dynamic assignment of slave data to the first slot

2.22

node

master or slave

2.23

point-to-point addressing

addressing used for communication between the *master* and one *slave*

2.24**power level**

bus level forming the Power Phase

2.25**Power Phase**

part of a data bit during which the *master* transmits the *power level*

2.26**R-bit**

reserved bit in *D-frames* for future definition

2.27**SEL-bit**

bit used in *S-Frames* to control *slaves* configured for *half-rate* mode

2.28**S-Frame**

type of frame used by the *master* to collect dynamic data from *slaves* periodically

2.29**signal address**

address assigned to peculiar signals provided by *slaves*, used in *S-Frames* for *Multi-Sharing*

2.30**slave**

device that is connected to the bus and is not the *master*

2.31**slave address bitmap**

part of a *D-Frame* in which each bit corresponds to one *slave*

2.32**slot**

part of an *S-Frame* assigned to a certain *slave* to be filled with its data

2.33**Slot Length**

determines the number of data bits that a *slot* consists of

2.34**Sub-Slot**

sub-section of a *slot*

2.35**T-bit**

first bit of a frame, used to define the frame type (*S-* or *D-Frame*)

3 Abbreviations

ACU	Airbag Control Unit
ASIC	Application-Specific Integrated Circuit
CRC	Cyclic Redundancy Check
ECU	Electronic Control Unit

ISO 22896:2006(E)

HSD	High Side Driver
INT	Interrupt
LSB	Least Significant Bit
LSD	Low Side Driver
MSA	Multi-Sharing Address
MSB	Most Significant Bit
MTP	Multi Time Programmable
NVM	Non-Volatile Memory
ORC	Occupant Restraint Controller
OTP	One Time Programmable
RAM	Random Access Memory
RCM	Restraint Control Module
ROM	Read Only Memory
SDM	Sensing and Diagnostic Module
SEL	Select
SOF	Start Of Frame
SSB	Slot Start Bit

4 General

Automotive occupant restraint systems are controlled by a Sensing and Diagnostic Module (SDM), also called Airbag Control Unit (ACU), Restraint Control Module (RCM) or Occupant Restraint Controller (ORC), which is connected to peripheral devices:

- dynamic sensors with high update rates, e.g. for remote front and side impact sensing;
- static sensors with low update rates, e.g. buckle switches, seat position and occupancy sensors;
- actuators, especially deployable devices, e.g. squibs.

The SDM is also referred to as “master”; the peripheral devices are also referred to as “slaves”.

The bus provides a two-wire connection between the SDM and the peripheral devices and supplies power to the slaves. It offers bi-directional communication. The master’s bus interface sends energy into the bus, the slave’s bus interface extracts power from the bus. The master determines the bus speed and initiates all communication by sending message frames on the bus. Slaves may transmit their data within these frames when requested by the master. Smart dynamic sensors (defined in 5.3) may send an interrupt to the master while the bus is idle or while there is diagnostic communication on the bus. The master’s reaction to the interrupt is application specific and typically lets the master stop diagnostic communication and start polling of impact data instead.

The data is usually coded using differential bus voltage. On a bus, where several transmitters are sharing the same wiring, using voltage as the data signal has a significant advantage over current, because it enables the transmitter to verify the data that it sent on the bus. This is the most reliable way to detect bus collisions, e.g. when two sensors are transmitting their data at the same time. For less critical data like diagnostics, reply data from slaves can be coded using current, which allows connection of deployable slaves to the bus via isolation resistors (see 6.6.4.2).

5 System architecture

5.1 General

The specification covers sensor busses, deployment busses and combined sensor/deployment busses.

The bus shall support 64 slave addresses, of which three shall be reserved for special purposes. The actual number of slaves that can be connected to one bus is limited by the supply current for the slaves and by the pin capacitance of the slaves (see also Clause 6). Bandwidth limits shall also be considered.

NOTE A single slave can incorporate the functionality of several slave addresses.

5.2 Deployment bus

The deployment bus shall support deployable devices and static sensors. The bus shall provide point-to-point messages for diagnostic communications between master and slaves. Since the deployment bus shall support fast selective deployment of several deployable devices, the bus shall also provide a special deploy message, which allows individual deployment control of up to 12 devices at a time. There shall be four deploy messages available, each controlling 12 device addresses:

- address range 0b000000 – 0b001011;
- address range 0b010000 – 0b011011;
- address range 0b100000 – 0b101011;
- address range 0b110000 – 0b111011.

In this way, up to $4 \times 12 = 48$ deployable devices can be controlled by one bus. The address 0b000000 should not be used as a slave address, because this address shall be the default address of all slaves that have not been programmed yet. See also 7.2.1, 7.3.2 and 7.4.8.

The deployment bus shall provide communication with and without a special “safing” signal, which may be used for additional differentiation between diagnostic communication and actual deploy commands.

5.3 Sensor bus

The sensor bus shall support static and dynamic sensors. There may be two types of dynamic sensors.

- **Raw-data sensors** send time-critical data periodically to the SDM.
- **Smart sensors** send time-critical data event-driven only.

Smart sensors can easily coexist with static sensors on the same bus.

NOTE Raw-data sensors usually occupy the bus bandwidth all the time, while smart sensors usually need the full bandwidth only for a short time during an event.

ISO 22896:2006(E)

EXAMPLE In the absence of an event, the master can poll diagnostic data and/or static sensor data from all slaves. When an event occurs, a smart sensor can stop this communication by sending an interrupt to the master and to the other slaves. The master can then assign the full bus bandwidth for exclusive communication of time-critical data from smart sensors to the master.

The number of smart sensors that can be connected to the bus is usually limited by the ratio between the available bandwidth and the latency time requirements for this data transfer. Additional static sensors on the bus do not contribute to the latency time, but they contribute to the physical bus load, which also limits the number of slaves (see Clause 6) on the bus.

On a sensor bus, the “safing” signal, known from the deployment bus, shall be used for error indication and optionally for the interrupt capability of smart sensors.

Since raw-data sensors usually are not required to send bus interrupts, they may be implemented without this option. Devices (master and slaves) made for raw-data sensor busses should either not have bus interrupt capability or provide a means to disable the bus interrupt function in a reliable way.

5.4 Combined sensor and deployment bus

On a combined sensor and deployment bus, all types of slaves that are connected to the same bus would have to share the available bandwidth and the available bus power. This shall be taken into account when designing such a mixed system.

The “safing”-level LS0 shall be used on the one hand for confirmation of deploy messages (i.e. LS0 transmitted by the master), and on the other hand for signalling bus collisions (i.e. LS0 transmitted by a dynamic sensor during an S-Frame) or for interrupting communication (i.e. LS0 transmitted by a smart sensor during a D-Frame). The deployment and sensor bus protocol shall ensure that the relevant function of the LS0-level can be clearly identified by all nodes (see 8.5.4).

6 Physical Layer

6.1 Bus medium

The bus can use unshielded twisted pair or untwisted cable (see Table 3). The maximum bus length depends on the bus topology (see 6.2).

6.2 Bus topology

6.2.1 Parallel configuration

For a parallel bus configuration, each slave shall be directly connected to the two bus wires Bus-A and Bus-B (see Figure 1).

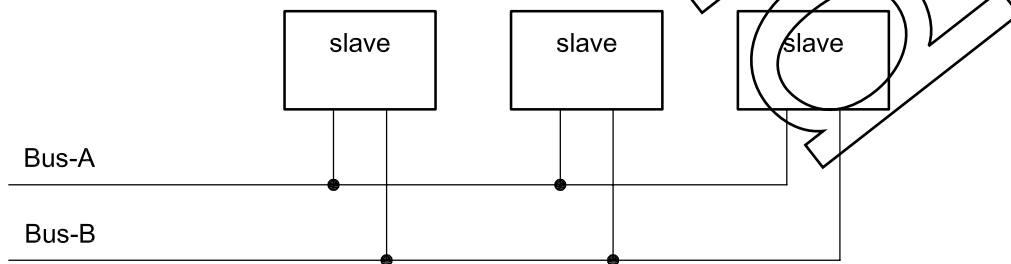


Figure 1 — Parallel connection of slaves to the bus

Bestelformulier

Stuur naar:

NEN Standards Products & Services
t.a.v. afdeling Klantenservice
Antwoordnummer 10214
2600 WB Delft



NEN Standards Products & Services

Postbus 5059
2600 GB Delft

Vlinderweg 6
2623 AX Delft

T (015) 2 690 390
F (015) 2 690 271

www.nen.nl/normshop

Ja, ik bestel

__ ex. NEN-ISO 22896:2006 en Wegvoertuigen - Bus voor inzet en sensorberichten veiligheidssystemen voor inzittenden

€ 161.21

Wilt u deze norm in PDF-formaat? Deze bestelt u eenvoudig via www.nen.nl/normshop

Gratis e-mailnieuwsbrieven

Wilt u op de hoogte blijven van de laatste ontwikkelingen op het gebied van normen, normalisatie en regelgeving? Neem dan een gratis abonnement op een van onze e-mailnieuwsbrieven. www.nen.nl/nieuwsbrieven

Gegevens

Bedrijf / Instelling

T.a.v. O M O V

E-mail

Klantnummer NEN

Uw ordernummer BTW nummer

Postbus / Adres

Postcode Plaats

Telefoon Fax

Factuuradres (indien dit afwijkt van bovenstaand adres)

Postbus / Adres

Postcode Plaats

Datum Handtekening

Retourneren

Fax: 015 2 690 271

E-mail: klantenservice@nen.nl

Post: NEN Standards Products & Services,

t.a.v. afdeling Klantenservice
Antwoordnummer 10214,
2600 WB Delft

(geen postzegel nodig).

Voorwaarden

- De prijzen zijn geldig tot 31 december 2018, tenzij anders aangegeven.
- Alle prijzen zijn excl. btw, verzend- en handelingskosten en onder voorbehoud bij o.m. ISO- en IEC-normen.
- Bestelt u via de normshop een pdf, dan betaalt u geen handeling en verzendkosten.
- Meer informatie: telefoon 015 2 690 391, dagelijks van 8.30 tot 17.00 uur.
- Wijzigingen en typfouten in teksten en prijsinformatie voorbehouden.
- U kunt onze algemene voorwaarden terugvinden op: www.nen.nl/leveringsvoorwaarden.